

Door mirror power operated, replacing




Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Removal

Removing the door mirror

Remove:

- the cover and the door panel. See: [Panel front side door, replacing](#)
- the connector
- 1 nut
- the door mirror from the bodywork.

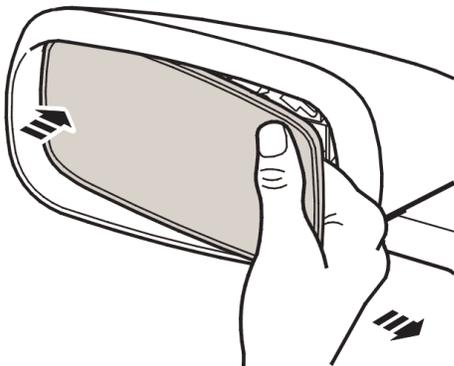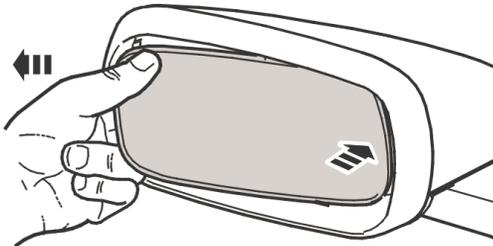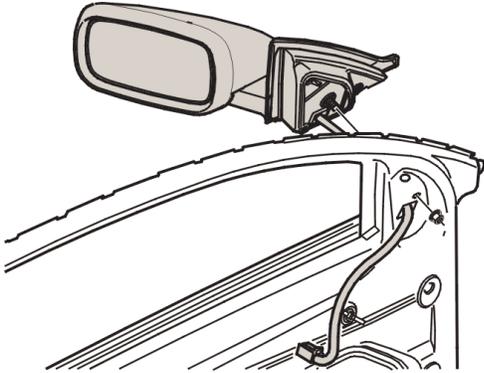

Removing the mirror glass

Fold the mirror glass backwards and inwards as illustrated.

Grip the mirror glass. Pull the mirror glass out/backward until it releases from the outer mounting.

Then press the glass carefully into the door mirror housing. Do not allow the glass to engage in the catch.


Unhook the mirror glass from the inner mounting.

Disconnect the terminal pins from the mirror glass.

Note! Note the routing of the wiring.

Removing the shield

Press the cover out using a finger/thumb.

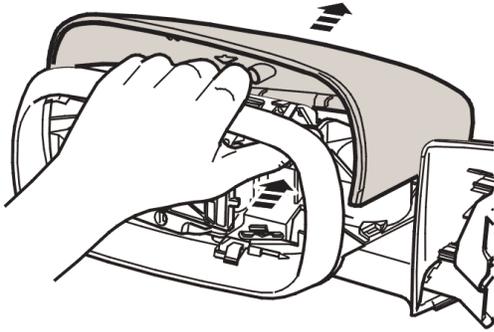

Removing electric motor

Pry out the electric motor from the 3 locating pins.

Separate the connector(s).


Note! Note the position of the connectors.

Installation

Install the electric motor

Install:

- the connector(s) (1)
- the electric motor. Ensure that it clicks properly into place in the 3 mounting points.

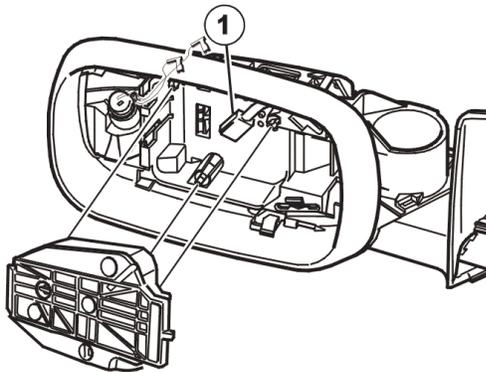

Installing the cover

Guide the cover against the door mirror housing. Press the cover into place.

Installing the mirror glass


Install the 2 terminal pins on the mirror glass. Fold out the mirror mounting on the electric motor.

Hook the mirror glass on the inner mounting.

Note! Ensure that the 2 guides/plastic springs are correctly located.

Press the mirror glass into position on the outer mounting.

Hint: Use a weatherstrip tool as a counterhold.

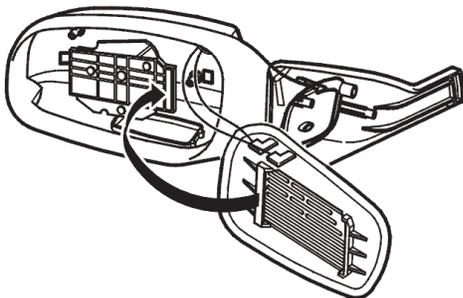

Installing the door mirror

Install:

- the door mirror
- 1 M8 nut. Tighten. See: [Tightening torque](#)
- the connector
- the door panel and the cover. See: [Panel front side door, replacing](#)

